


# FIRST TEAM SPORTS

## SCORPION™ PORTABLE PICKLEBALL

### Assembly & Setup Instructions

1/21/2022

**FIGURE A**

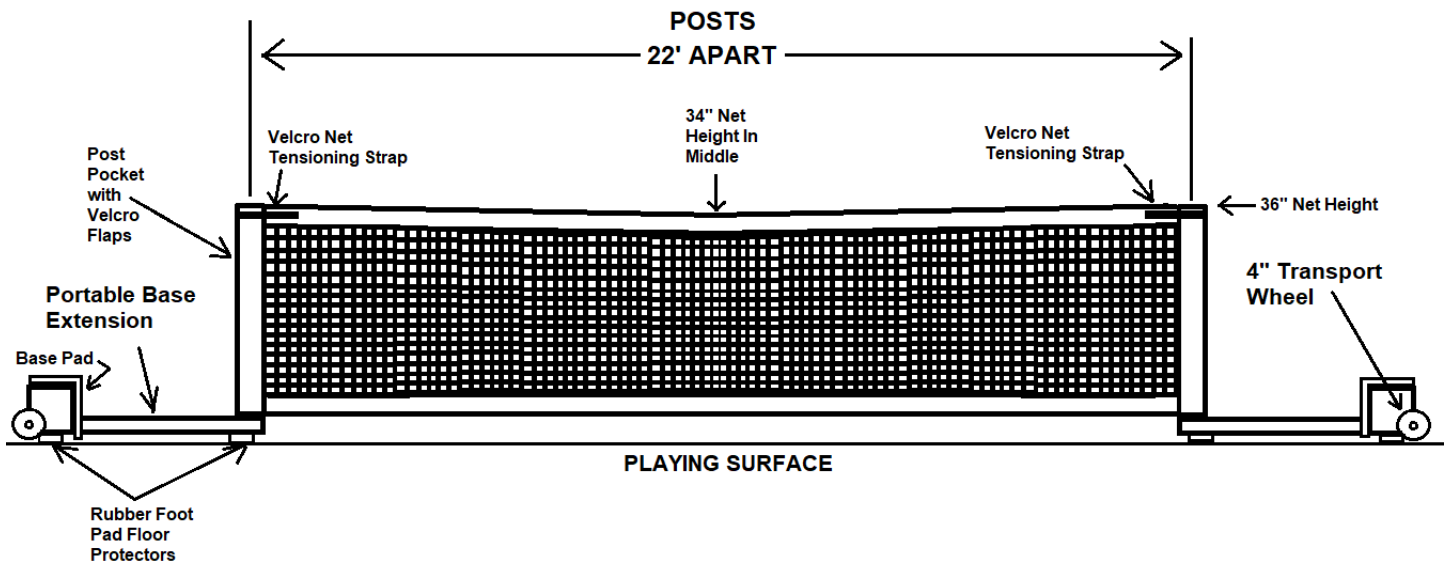

### BILL OF MATERIALS

(2) Portable Base	(12) #10x3/4" Flathead Phillips Mach. Screw
(6) Rubber Foot Pad	(12) #10 Lock Washer
(4) 2x4 Transport Wheel	(4) 1/2"x3" Hex Bolt
(1) Net	(2) Base Pad
(4) 2" Square Plug	(2) Base Extension Pad

Unpack shipment and report any shortages to First Team immediately, 1-800-649-3688

1. Remove each base unit from its pallet.
2. Using (1) 1/2"x3" Hex Bolt provided secure (1) 2x4 Transport Wheel into the threaded hole on each side of the Portable Base ballast box. Tighten bolt until snug. Do not overtighten, wheels should rotate freely.
3. Next, lift up on the Portable Base Extension (see Figure A above) to hinge the unit backward to allow access to the underside of the ballast and portable base extension.
4. Using (2) #10x3/4" Flathead Phillips Machine Screws and (2) #10 Lock Washers, attach (1) Rubber Foot Pad to each set of threaded holes provided. (one pad is

underneath the Portable Base Extension toward the front and two pads are under the ballast weight box). Do not over tighten screws!

5. The base units are designed so the wheels engage the floor when the base is tipped backward. The wheels disengage when the base unit is returned to its normal upright playing position resting on the foot pads so it will not move. Tip the units into rolling position and place each unit so its upright net post is 22' apart from the opposing post. See Figure A.
6. Attach Net – The net is manufactured with pockets at each end for the upright post. The pocket has a Velcro closure that allows you to wrap around the upright post and secure with the Velcro flap. Secure the net to one upright post first, then secure the opposite end in the same way. NOTE: You may find it easiest to secure the Velcro at the top and bottom of the post first, then work your way toward the middle overlapping the Velcro.
7. Once the net is properly secured to both posts, position bot Post Pockets so the top of the net is approximately ½” below the top of the post. This should be the proper 36” height for the net at the post ends.
8. Then, tension the top of the net at both ends using the Velcro Net Tensioning Straps as a shown below in STEP 1 & STEP 2. NOTE: Tension the net until the top of the center measures 34” above the playing surface as shown in Figure A.
9. Attach safety padding – Clean ballast box to remove any dust or dirt. Then, peel the self-adhesive strip on the inside of the Base Pad and secure it in place onto the ballast box. (See Figure A for pad orientation). Follow the same procedure to install the Base Extension Pad. Repeat for second base unit. NOTE: Bases may be rolled without removing safety padding.
10. Your SCORPION portable pickleball set is ready for play!



## **TRANSPORT & STORAGE**

1. Loosen the Velcro Net Tensioning Strap at both ends of the net.
2. Peel & open the Velcro flap closure on the Post Pocket at both ends of the net and remove the net from both portable base units. Fold net for storage.
3. Lift up on the Portable Base Extension until the wheels engage the playing surface.
4. Push or pull the Portable Base unit to the desired Storage or Playing position.
5. Repeat for second Portable Base unit.

**FIRST TEAM, INC**  
**902 COREY ROAD**  
**HUTCHINSON, KS 67501**  
**800-649-3688**  
**[www.firstteaminc.com](http://www.firstteaminc.com)**